


Inductive positioning system

PMI80-F90-IU-V1

- Analog output 0 V ... 10 V/4 mA ... 20 mA
- Measuring range 0 ... 80 mm

Dimensions

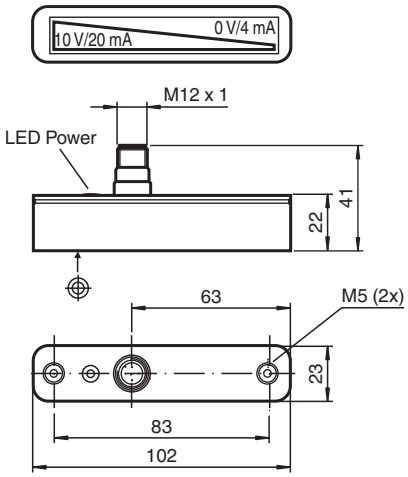

Technical Data


General specifications		
Switching element function		analog, current or voltage output
Object distance		0.5 ... 3 mm , recommended: 2 mm
Measurement range		0 ... 80 mm
Linearity range		1 ... 79 mm
Nominal ratings		
Operating voltage	U_B	18 ... 30 V DC
Reverse polarity protection		reverse polarity protected
Linearity error		within measuring range: ± 0.8 mm within linearity range: ± 0.4 mm
Repeat accuracy	R	± 0.1 mm
Resolution		125 µm
Temperature drift		± 0.5 mm (-25 °C ... 70 °C)
No-load supply current	I_0	≤ 40 mA
Operating voltage indicator		LED green
Functional safety related parameters		
$MTTF_d$		419 a

Release date: 2024-06-24 Date of issue: 2024-06-24 Filename: 191134_eng.pdf


Technical Data

Mission Time (T_M)	20 a
Diagnostic Coverage (DC)	0 %
Analog output	
Output type	1 current output: 4 ... 20 mA 1 voltage output: 0 ... 10 V
Load resistor	current output: ≤ 400 Ω voltage output: ≥ 1000 Ω
Short-circuit protection	voltage output: pulsing
Compliance with standards and directives	
Standard conformity	
Standards	EN 60947-5-2:2007 IEC 60947-5-2:2007 EN 60947-5-7:2003 IEC 60947-5-7:2003
Approvals and certificates	
UL approval	cULus Listed, General Purpose, Class 2 Power Source
CCC approval	CCC approval / marking not required for products rated ≤36 V
Ambient conditions	
Ambient temperature	-25 ... 70 °C (-13 ... 158 °F)
Mechanical specifications	
Connection type	4-pin, M12 x 1 connector
Degree of protection	IP67
Material	
Housing	ABS
Target	mild steel, e. g. 1.0037, SR235JR (formerly St37-2)
Dimensions	
Height	41 mm
Width	23 mm
Length	102 mm

Connection

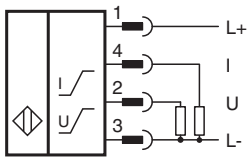

Connection Assignment

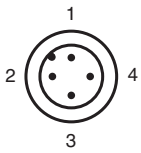


Release date: 2024-06-24 Date of issue: 2024-06-24 Filename: 191134_eng.pdf


Connection Assignment

Wire colors in accordance with EN 60947-5-2

1	BN	(brown)
2	WH	(white)
3	BU	(blue)
4	BK	(black)

dimensions for the target object:

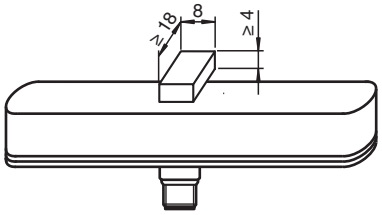

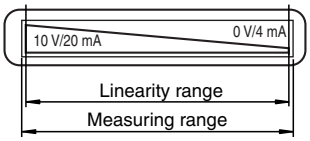

Release date: 2024-06-24 Date of issue: 2024-06-24 Filename: 191134_eng.pdf

Operation

Operating instructions

- Safety information

  Warning: This product may not be used in applications where personal safety depends on the function of the device. This product is not a safety component as described in EU Machinery Directive.

- Sensor versions

  The F90 linear position measurement system is available in 2 versions.
  In the PMI...-F90-**IU**-V1 version, the position measuring system transmits current and voltage signals proportional to the position of the damping element at the outputs.
  The PMI...-F90-**IE8**-V15 version offers a current signal as well as the option of teaching in two switching points directly at the sensor independently of one another at the press of a button, which is then indicated on two switching outputs. Two additional LEDs indicate the output states of the two switching outputs.

Version PMI…-F90-IU-V1

Output signals: 4 mA ... 20 mA and 0 V ... 10 V

Note: Only the current output or the voltage output may be used. The unused output must remain load free.

Version PMI…-F90-IE8-V15

Output signals: 4 mA ... 20 mA and 2 programmable switching amplifiers

- Programming the PMI…-F90-IE8-V15


  The rear of the PMI...-F90-IE8-V15 sensor has two small, slightly recessed push buttons for programming the switching points. The buttons are marked "teach in" and S1 for switching point S1 and S2 for switching point S2.
  To teach in a switching point, proceed as follows:
  - The position detection damping element must be placed at the relevant position, i.e. the switching point that you wish to teach in.
  - Press the corresponding push button for at least two seconds.
    The associated switching state LED starts flashing to indicate that the sensor is now in “teach mode”.
  - Press the button again to confirm the relevant switching point.
    The switching state LED then lights up constantly as long as the damping element is not moved.

  The switching point is now taught in and the associated switching point changes to an active state within an actuator adjustment range of ± 1 mm around the taught switching point.

  Note: If the switching point is not confirmed within 80 seconds, the sensor exits “teach mode” and continues operation with the previous values.

- Damping element


  The linear position measurement system is adapted perfectly to the geometry of the damping elements offered in our product range.

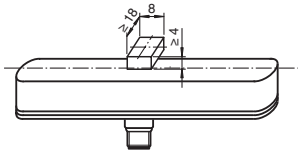


  Note: When using other damping elements, always make sure that the active surface of the damping element has a width of exactly 8 mm and covers the entire width of the sensor.


- Installation and operation

Instructions on installation

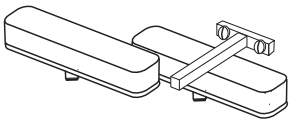

  - Flush installation is possible
  - to extend the measuring range, units from the -F90 linear position measurement system can be connected in series (both behind and adjacent to one another) without a minimum distance.
  - The minimum distance between the measuring field (framed area on the sensor front) and mounting base or mounting elements on the damping element must be 3 mm.

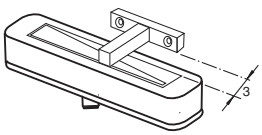

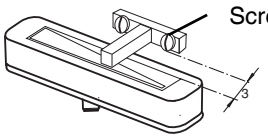



- Operating information

  The specified measurement accuracy is achieved with an actuator distance of 1 to 3 mm.
  If the damping element leaves the measuring area (illustration below):
  - the last valid value is retained at the voltage output (PMI…-F90-IU-V1 only) until the damping element enters the valid area again.
  - the last valid value is retained for 0.5 seconds at the current output (all types). The output then switches to a fault current of 3.6 mA until the damping element enters the valid area again.


Release date: 2024-06-24 Date of issue: 2024-06-24 Filename: 191134_eng.pdf

- the switching amplifiers set to basic state after 0.5 seconds ("normally open").

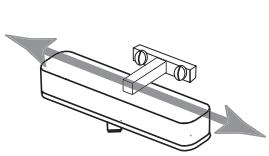

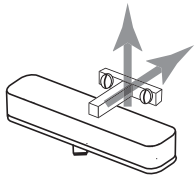

- Defining the measuring range / measured position
  The measured position of the damping element (actuator) is based on half of the width (center of the actuator). The measuring range starts and finishes when half the width of the actuator covers the measurement field marked on the sensor when the actuator makes a longitudinal movement (see left illustration above).

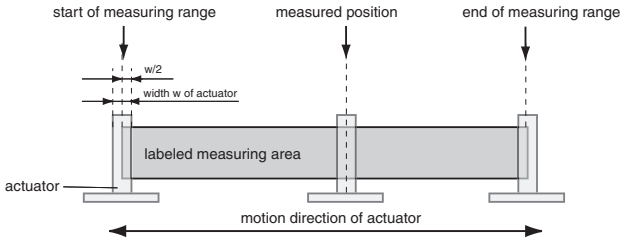

- Accessories

Damping elements
BT-F90-W



Mounting bracket
MH-F90



Straight cable:V1-G-2M-PVC (4-wire)
V15-G-2M-PVC (5-wire)
Angled cable:V1-W-2M-PVC (4-wire)
V15-W-2M-PVC (5-wire)

Release date: 2024-06-24 Date of issue: 2024-06-24 Filename: 191134_eng.pdf

Unikeyic Electronics

Global Electronic Components Distributor

Click to view pricing, inventory, delivery, and lifecycle information:

PEPPERL+FUCHS:

OQT150-R100-2EP-IO-V31-L 114642 24772 KLR-C02-2,2-2,0-K70 MH4-2057 NBB0.8-4M25-E0 NBB8-18GM50-E0 BF18 NBB2-8GM40-E0-V1 NBB5-18GM50-A0 OBR12M-R100-2EP-IO-V31-L WCS3-MH1 134143 GLV30-8-2500/47/73C NBB4-12GM50-A2-V1 OQT150-R101-2EP-IO-V31 S1SD-1AI-1U.1 UB2000-F42-E6-V15 NBB1-4GM22-E2 NBB5-18GM50-E2 OBR5000-18GK40A-E2 UBE800-F77-SE2-V31 34441 NBB0.8-5GM25-E2 OBR2500-12GM40-E5 UB800-18GM40-I-V1 NBB2-12GM50-A2-V1 NBB2-12GM50-E2 OBD450-18GK40A-E2 CCN15-30GS60-E2-V1