OSMP Right–Angle Cable Jack
Direct Solder Attachment 1056551–1 and 1056554–1

CONNECTOR TYPE	CABLE TYPE	TOOLS REQ'D
OSMP RIGHT ANGLE CABLE JACK DIRECT SOLDER ATTACHMENT	.085 S.R. COAXIAL CABLE	NONE

CONNECTOR

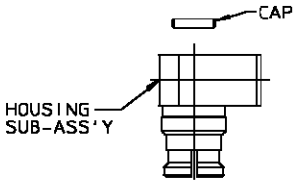

ASSEMBLY OPERATIONS

1.0 PREPARATION OF CABLE
1.1 TRIM CABLE TO DIMENSION SHOWN.

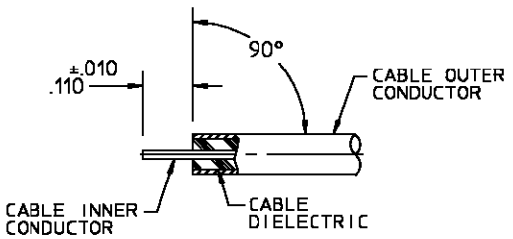

2.0 SHAPE INNER CONDUCTOR OF CABLE
2.1 FILE INNER CONDUCTOR TO LENGTH AS SHOWN.
2.2 FILE BLUNT END OF INNER CONDUCTOR TO AN 85°–90° CONE

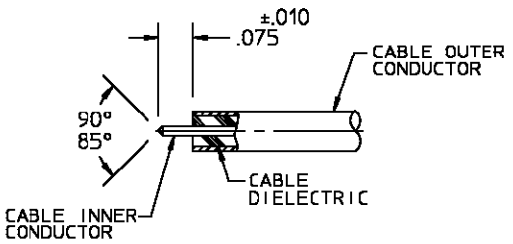

3.0 SOLDERING OF HOUSING SUB-ASSEMBLY TO CABLE
3.1 POSITION AND SECURE HOUSING IN A SMALL BENCH VISE.
3.2 CAREFULLY INSERT CABLE INNER CONDUCTOR INTO PRE-ASSEMBLED CENTER CONTACT OF HOUSING SUB-ASSEMBLY AND SEAT CABLE FIRMLY.
3.3 SOLDER CABLE TO HOUSING SUB-ASSEMBLY.

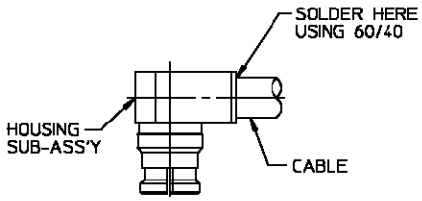

4.0 SEAL OPENING IN REAR OF HOUSING SUB-ASSEMBLY
4.1 PRESS CAP INTO OPENING IN REAR OF HOUSING SUB-ASSEMBLY.

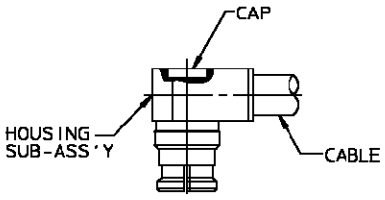

©2000 Tyco Electronics Corporation, Harrisburg, PA.
All International Rights Reserved.
*Trademark

This controlled document is subject to change.
For latest revision call the AMP FAX* number.
Dimensions are in inches.

TOOLING ASSISTANCE CENTER 1–800–722–1111
AMP FAX/PRODUCT INFO 1–800–522–6752